

Electromagnetic Radiation Measurements and Safety Issues of some Cellular Base Stations in Nablus

A. Mousa*

Electrical Engineering Department, An Najah University, Palestine.

Received 17 July 2010; Accepted 20 February 2011

Abstract

As the mobile telecommunication systems are tremendously growing all over the world then the numbers of handheld and base stations are also rapidly growing and it became very popular to see these base stations distributed everywhere in the neighborhood and on roof tops which has caused a considerable amount of panic to the public in Palestine concerning with the radiated electromagnetic field from these base stations may cause any health effect or hazard. This paper focuses on the radiated electromagnetic energy from some typical mobile base stations around the city of Nablus. The exposure levels due to these stations were measured and compared to some international standard guidelines like ICNIRP and FCC to see if it meets these standards, this is in order to answer some of the public fear and concern. The results are presented and some comments are made on the other sources of electromagnetic radiation in the 200 kHz to 3 GHz range.

Keywords: Electromagnetic pollution, mobile base station, exposure limitations.

1. Introduction

Electromagnetic Field (EMF) and waves are an important and main media to carry signals from a certain source to the desired destination; this signal can be voice, data or image. The EMF is propagating at the speed of light in free space (300,000km/s) so it can be modulated, transmitted and received while conveying the necessary information [1], [2] and [3].

This electromagnetic wave consists of an electric field perpendicular to the magnetic field and both are perpendicular to the direction of propagation as shown in Figure 1. The wave length of the wave depends on the operating frequency.

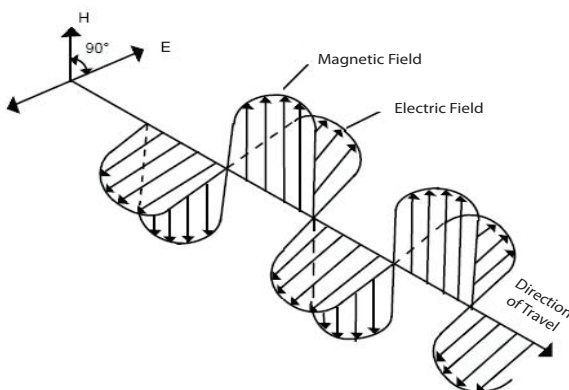


Figure 1. The electromagnetic wave

Different types of electromagnetic waves have different frequencies as shown by the electromagnetic spectrum in Figure 2. Each of these frequencies has its own properties and characteristics which make it distinguished from others. The Electromagnetic radiation may be classified as ionizing and non-ionizing radiation. Ionizing radiation has enough energy to remove bound electrons from the orbit of an atom such that it becomes an ionized atom which may cause health hazard. On the other hand, the non-ionizing radiation does not have the sufficient energy to ionize (change) the atoms. For example, the human eye can easily perceive the light whereas the EMF with very high frequency, like X-ray, may ionize material and break down molecules. However, this radioactive radiation should not be confused with radio wave frequency (RF).

The radio waves used in mobile telephones and cellular communications are also electromagnetic waves like visible light and X-ray and they also propagate in the same speed of light. The RF used for mobile communication can be in the range 450-2200 MHz which is considered as part of the microwave (MW) range as shown in Figure 2. It is also shows the range of non-ionizing and ionizing ranges of frequency and the applications of each one as well as the energy associated with each one. Obviously, the wave energy is directly proportional to the wave frequency.

* E-mail address: allam@najah.edu

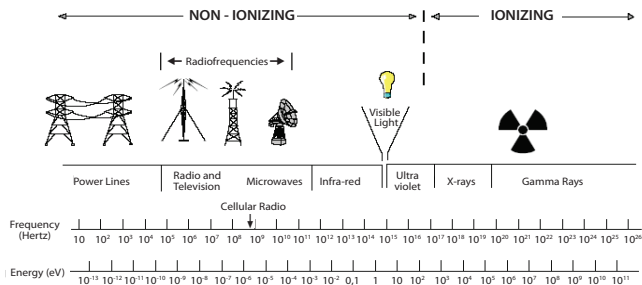


Figure 2. The electromagnetic spectrum, energy and some applications

2. Cellular Networks

A cellular communication system is one of the most increasing telecommunication sectors. It consists of several transmitters, called base stations, covering adjoining zones, called cells, and the used mobile phones. There exist several mobile radio systems in the world ranging from analog to digital systems and having different multiple access types and frequency carriers. The main three systems are the North America, European and Japan systems where each of these systems was developed and through generations. The specifications of these systems are illustrated in Table 1, Table 2 and Table 3 respectively.

Table 1. Mobile radio systems in USA.

Cellular system	Year	Transmission type	Multiple access type	Channel Bandwidth	Generation
Advanced Mobile Phone system AMPS	1983	Analog	FDMA	800MHz	1 st
Narrowband AMPS	1992	Analog	FDMA	800MHz	1 st
US Digital Cellular Digital AMPS IS-45/IS-136	1991	Digital	TDMA	800/1900MHz	2 nd
US Narrowband Spread Spectrum IS-95,CDMAone	1993	Digital	CDMA	800/1900MHz	2 nd
CDMA-2000	2001	Digital	CDMA	1900MHz	3 rd

Table 2. Mobile radio systems around the world.

Cellular system	Year	Transmission type	Multiple access type	Channel Bandwidth	Generation
Total Access Communication ETACS	1985	Analog	FDMA	900MHz	1 st
Nordic Mobile Telephone NMT-900	1986	Analog	FDMA	450/900MHz	1 st
Global system of Mobile GSM	1990	Digital	TDMA	900/1800 MHz	2 nd
UNIVERSAL Mobile Telecom System UMTS WCDMA	2001	Digital	CDMA	2000MHz	2 nd

Table 3. Mobile radio systems in Japan.

Cellular system	Year	Transmission type	Multiple access type	Channel Bandwidth	Generation
J-TACS	1985	Analog	FDMA	900MHz	1 st
PDC	1986	Digital	TDMA	900MHz	2 nd
CDMA one (KDDI)	2000	Digital	CDMA	900MHz	2 nd
UMTS WCDMA (NTT Docomo)	2001	Digital	CDMA	2000MHz	3 rd

Considering the GSM system as one of the most popular cellular system all over the world and being the one which is adopted and operating in Palestine, then the operating frequency may be summarized as shown in Table 4.

Table 4. GSM frequency Spectrum.

GSM range (MHz)	Uplink (MHz)	Downlink (MHz)
900	890-915	935-960
1800	1710-1785	1805-1880
1900	1850-1910	1930-1990

I) Base Station

The cells radii many vary in size according to the desired capacity and geographical area to be covered, this ranges from tens of meters in buildings, and hundreds of meters in cities up to tens of kilometers in the countryside [4]. Each of these cells is covered by the allocated base station which is responsible for transmitting and receiving the radio signal required to establish the communication between users. The base station must be designed in a way such that each cell in the network can perform efficiently to achieve good signal, minimum congestion or call drop and no interference [5]. The RF power should be assigned to achieve these goals. It should be large enough to provide coverage and quality but small enough to prevent interference.

To complete a call from any mobile phone, the network assigns a certain available RF channel within the cell that covers the named mobile phone, if this cell is congested then this mobile phone is connected through a neighboring cell, the call is then routed to a switch that will proceed conventionally to the final destination being mobile or fixed destination. In case the user is moving and will cross the boundary of a cell into the range of a neighboring one, the network will “handover” the call from the serving base station into an other one that can provide coverage

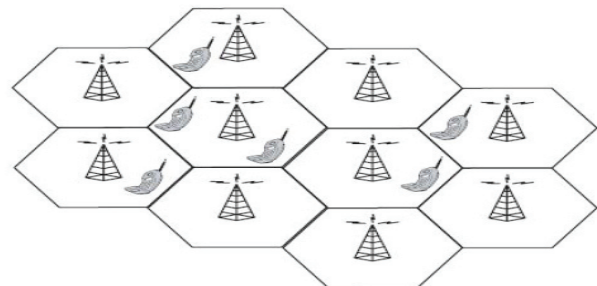


Figure 3. Neighboring cells

and capacity to this on-going call. An illustration of the neighboring cells is shown in Figure 3. The shape of cells are not perfect circles or hexagonal, but it depends on the environment such as buildings and mountains, it also depends on weather conditions and even system load [4], [5].

It is important to mention here that multiple cells are needed to cover an area both in capacity and signal strength, this is due to the fact that each cell can provide a limited number of instantaneous calls [5]. Hence, as the number of base stations operating at particular carrier frequency increases in a certain area the cell size gets smaller and so less power is required, for transmission, to cover this small-sized cell.

To achieve the desired goals of the base station, antennas with certain power, orientation and gain should be chosen and fixed properly. The gain of the antenna is important but also it should be mounted clearly with no obstacles that may reduce the coverage or signal strength of the base station since these obstacles will force the base station to use higher power to cover the cell which is waste of resources and may cause interference with the neighboring cells. The coverage area of a typical antenna is illustrated in Figure 4 [6].

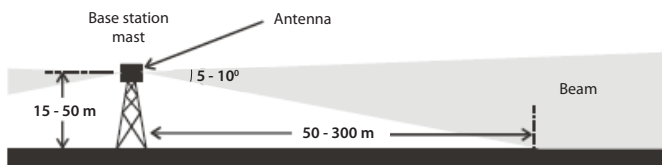


Figure 4. Direction of coverage due to a base station antenna

In small cells case, where mobile phones are highly used, antennas may be installed on building roofs and sides or on small poles (low impact facilities), while in the case of large cells (low usage area), the antennas are usually mounted on masts and towers to deal with the large distances and gains. In both cases, it is desired to maintain service quality to all users. Typical antenna types and way of fixing is illustrated in Figure 5.



Figure 5. Several antenna types mounted

Typical heights of these antennas are 15-50 meter from ground. A base station may consist of several “omni directional” antennas, each one is directed to a certain geographical direction, and the signal from this antenna is directed to cover the desired area in a relatively narrow beam in the vertical plane as shown in Figure 4. The advantages and disadvantages of cellular systems with small cells are shown in Table 5.

Table 5. Advantages and disadvantages of small cells cellular communication system.

Advantages	Disadvantages
High capacity	Infrastructure needed
Less transmission power	Hardware needed
Local interference	Frequency planning
Robustness to failure at single component	

II) Mobile phones

Mobile phones are connected to the base stations via radiofrequency electromagnetic waves (RF-EMF). These mobile phones should be in the coverage area of a certain cell; the base station of this cell must assign this mobile phone the necessary RF channel to maintain the connection. To achieve this link, the mobile should use certain transmission power to connect to the base station (uplink) and the base station should use the required power to connect to the mobile phone (down link).

Similar to the base station case, the mobile phone should not have obstacles since this reduces the signal strength and so the quality becomes poor. Increasing the transmission power means the mobile will not work on the minimum power which results in waste of resources and lose of battery life as well as other problems that may arise.

It is important to conserve the battery life and to minimize the interference between cells and hence the mobile transmission power is limited to the minimum level required to maintain the connection and so it is better to be close to the base station so as to reduces the transmission power in both directions.

III) Quality in Mobile Communications

The sound quality in mobile communications depends on two items [4], [5], [6]) Strength of the radio signal to convey the data, and 2) No other strong RF signals should present at the same or even adjacent frequencies. To achieve these two points, the mobile and base station must use the appropriate output power. The intensity of the EMF is decreased as the distance from the antenna is increased, this enables use of the same frequency in a new cell at a certain distance from the first base station without any disturbance between these two cells, this is called “frequency-reuse” which is so important to be optimized since the mobile network is limited in frequency spectrum [6].

Actually, the power density (intensity) decreases by a factor of the square of the distance as one move away from the base station. Moreover, the intensity is proportional to the transmitter’s output power. Typically the available mobiles have a maximum output power of one watt, but only a fraction of this power is used to establish good communication under the normal conditions. Some typical values of the handset output power, for the most common mobile phone systems, is given in Table 6.

The output power of a base station ranges from few watts for

small cells to hundreds of watts for huge cells depending on some parameters such as the type and location. Moreover, this power is usually directed so that the signal is stronger in some directions and weak in the others as it is desired.

Table 6. Typical output power of certain mobile phones handsets.

Mobile telephone system	Where primarily used	Type	Frequency band (MHz)	Handset output power (W) (maximum)
NMT	Scandinavia	Analog	900	
ETACS	UK, Asia	Analog	900	0.6
AMPS	America, Asia, Australia	Analog	800	0.6
D-AMPS	America, Asia	Digital	800/1900	0.2
GSM	Europe, Asia, Australia	Digital	900	0.25
PDC	Japan	Digital	800/1500	0.2
GSM1800	Europe, Asia	Digital	1800	0.125
GSM1900	North America	Digital	1900	0.125
DECT	Europe, Asia	Digital	1900	0.01

3. Safety Guidelines to Level of Exposure

Since it was first introduced around 1980, almost all classes of society are using mobile phones. The estimated number of mobile phone users is around 1.5 billion all over the world [7]. The Cellular Telecommunication Industry Association (CTIA) has reported that this industry is growing at a rate of 40% per year [8]. This so fast rapid deployment of mobile telecommunications networks in the world has alert public concern over possible health effects from exposure to radiofrequency electromagnetic energy (RF EME) emitted by both mobile phones and base station antennas.

I) Health and Safety

The exposure to very high levels of RF energy can be harmful and may cause some biological effects on human [9], [10], these effects may result from heating of tissues and it is called "thermal effects" this is mainly due to the ability of RF energy to heat biological tissue, this is the same as the principle of the microwave oven. On the other hand, at low levels of exposure to RF radiation (lower than the threshold which may cause heat), the evidence of harmful biological effects is unproven; however it may cause some non thermal effects [11]. At the extremely high frequencies like X-rays, electromagnetic particles have sufficient energy to break bonds (ionization). This is why genetic material of cells may be damaged leading to cancer or birth defects. However, at lower frequencies, such as the RF ones used by cellular communications, the energy of the particles is too much low to break chemical bonds. Thus, RF energy is non-ionizing [12]

II) Standards and Limitations

The main concern of RF exposure has started some sixty years ago where several national and international standards, regulations and recommendations for RF energy exposure were developed for

both the general public (unconditional exposure) and those who are working with this field (occupational exposure). These exposure guidelines are usually similar and are based on the thresholds for known adverse effects and they have a margin of safety in order to protect people from the health effects of both short and long term exposure to EMF [13]. Some of these standards were organized and developed by the following organizations;

- 1) World Health Organization (WHO) [13]
- 2) International Commission on Non-Ionizing Radiation Protection [14]
- 3) Federal Communications Commission (FCC).
- 4) Institute of Electrical and Electronic Engineering (IEEE).
- 5) Environmental Protection Agency (EPA).
- 6) Food and Drug Administration (FDA).
- 7) American Cancer Society (ACS)
- 8) National Institute for Occupational Safety and Health (NIOSH).
- 9) Occupational safety and Health Administration (OSHA)
- 10) National Council of Radiation Protection and Measurements (NCRPM).
- 11) Australian Radiation Protection and Nuclear Safety Agency (ARPNSA).

The importance of WHO is that it has established the "International EMF Project" to review the scientific literature concerning the biological effects of electromagnetic fields. The main aim of this project is to provide a frame work for the international harmonization of RF safety standards [13]. The ICNIRP is considered as the most important organization specifying radio frequency EMF limits due to the following items [14];

- a) ICNIRP guidelines were published in 1998.
- b) Limits are based on all available scientific research and include large safety margins.
- c) Limits are set to protect all people from established adverse health effect from short and long term exposure.
- d) Specifies limits for both general public and occupational exposure.
- e) Endorsed by WHO.

When the distance to the radio transmitter is in the far field (greater than few wavelengths, i.e., around one meter for RF), safety limits are usually expressed as field strength. The field intensity is usually applied to exposure from base stations. Since RF waves have both electric and magnetic components, the electric field strength is measured in volts per meter (v/m) and the magnetic field is measured in amperes per meter (A/m). A commonly used unit to characterize the RF electromagnetic field is the plane wave power density especially at the far field. This density is defined as the power per unit area; it may be expressed in terms of watts per square meter (w/m^2), milliwatts per square centimeter (mw/cm^2) or microwatts per square centimeter ($\mu w/cm^2$).

For the case where the exposure is local (RF is transmitted from the mobile phone and hence closer to the user), the highest power absorption per unit mass in a small part of the body must be used and compared with the recommendations and standards. Specific Absorption Rate (SAR) is the quantity used to measure this amount of RF energy and it is expressed in units of watts per kilogram (W/kg) or (mW/kg).

The Maximum Permissible Exposure (MPE) recommended for power density is based on the threshold SAR value. However some guidelines may vary from each other for different operating frequencies. Actually, Whole-body human absorption of RF energy varies with the frequency of the RF wave [11]. The frequency range of 30-300 MHz is considered as the resonance range to human body where it absorbs the energy efficiently when the whole body is exposed [11].

The Maximum Permissible Exposure (MPE) limits adopted by FCC in 1996 for both occupational and general public exposure expressed in terms of electric field strength (E, v/m) and magnetic field strength (H, a/m) and power density (S, w/m2) for a wide frequency range are given in Table 7. Similarly, the ICNIRP limits for frequencies up to 300 GHz are given in Table 8. The details of the MPE for both ICNIRP and FCC are given in [14] and [15] respectively. In the far field of a transmitting antenna (plane wave case) the magnetic field may be given as E/377 and the power density is calculated as given in Eq.1.

$$S = \frac{E^2}{377} \quad (1)$$

Where E is the electric field strength (v/m)

Table 7. FCC Limits for Maximum Permissible Exposure (MPE).

(A) Limits for Occupational/Controlled Exposure

Frequency Range (MHz)	Electric field Strength (E) (V/m)	Magnetic field Strength (H) (A/m)	Power density (S) (mW/cm ²)	Averaging Time E ² , H ² or S (minutes)
0.3-3.0	614	1.63	(100)*	6
3.0-30	1842/f	4.89/f	(900/f ²)*	6
30-300	61.4	0.163	1.0	6
300-1500	--	--	f/300	6
1500-100,000	--	--	5	6

(B) Limits for General Population/Uncontrolled Exposure

Frequency Range (MHz)	Electric field Strength (E) (V/m)	Magnetic field Strength (H) (A/m)	Power density (S) (mW/cm ²)	Averaging Time E ² , H ² or S (minutes)
0.3-1.34	614	1.63	(100)*	30
1.34-30	824/f	2.19/f	(180/f ²)*	30
30-300	27.5	0.073	0.2	30
300-1500	--	--	f/1500	30
1500-100,000	--	--	1.0	30

f = frequency in MHz
equivalent power density

*Plane-wave

Table 8. ICNIRP reference levels for Maximum Permissible Exposure (MPE).

A) Limits for Occupational/Controlled Exposure*

Frequency Range	E-field strength (Vm ⁻¹)	H-field strength (Am ⁻¹)	B-field (μT)	Equivalent plane wave power density S _{eq} (Wm ⁻²)
Up to 1Hz	-	1.63*10 ⁵	2*10 ⁵	-
1-8 Hz	20,000	1.63*10 ⁵ /f ²	2*10 ⁵ /f ²	-
8-25 Hz	20,000	2*10 ⁴ /f	2.5*10 ⁴ /f	-
0.025-0.82 kHz	500/f	20/f	25/f	-
0.82-65 KHz	610	24.4	30.7	-
0.065-1 MHz	610	1.6/f	2.0/f	-
1-10 MHz	610/f	1.6/f	2.0/f	-
10-400 MHz	61	0.16	0.2	10
400-2000 MHz	3f^{1/2}	0.008f^{1/2}	0.01f^{1/2}	f/40
2-300 GHz	137	0.36	0.45	50

*Note: 1 f as indicated in the frequency range column.

(B) Limits for General Populations/Uncontrolled Exposure*

Frequency Range	E-field strength (Vm ⁻¹)	H-field strength (Am ⁻¹)	B-field (μT)	Equivalent plane wave power density S _{eq} (Wm ⁻²)
Up to 1Hz	-	3.2×10 ⁴	4×10 ⁴	-
1-8 Hz	10.000	3.2×10 ⁴ /f	4×10 ⁴ /f	-
8-25 Hz	10.000	4.000/f	5,000/f	-
0.025-0.8 kHz	250/f	4/f	5/f	-
0.8-3 kHz	250/f	5	6.25	-
3-150 kHz	87	5	6.25	-
0.15-1 MHz	87	0.73/f	0.92/f	-
1-10 MHz	87/ f ^{1/2}	0.73/f	0.92/f	-
10-400 MHz	28	0.073	0.092	2
400-2000 MHz	1.375 f^{1/2}	0.0037 f^{1/2}	0.0046 f^{1/2}	f/200
2-300 GHz	61	0.16	0.20	10

*Note: 1 f as indicated in the frequency range column.

It is clear from these recommendations that the MPE is a function of the operating frequency. Hence for 900 MHz the MPE for both FCC and CNIRP is shown in the Table 9.

Table 9. MPE for both FCC and ICNIRP at 900MHZ.

	FCC (W/ m ²)	ICNIRP (W/ m ²)
General public exposure	6	4.5
Occupational exposure	30	22.5

The Specific Absorption Rate (SAR) is a value that corresponds to the relative amount of RF energy absorbed by certain amount of the tissues of the body which is exposed to RF radiation. The FCC adopted limits for localized ‘partial body’ absorption in

terms of SAR, which apply to certain portable transmitters such as hand-held mobile telephones. A similar principle is adopted by the ICNIRP for the frequencies up to 10 GHz as shown in Table 10. These limits were set such that a safety factor of 10 and 50 were considered for the basic restrictions for occupational and general public exposures, respectively. The ICNIRP guidelines are generally accepted around the world. However, some countries such as USA and Canada have their own national SAR limits. A comparison between the SAR limits set by FCC and ICNIRP is shown in Table 11 for the 900 MHz operating frequency.

Table 10. The SAR and basic restrictions set by ICNIRP*.

Exposure characteristics	Frequency range	Current density for head and trunk (mA m ⁻²) (rms)	Whole-body average SAR (Wkg ⁻¹)	Localized SAR (head and trunk) (W kg ⁻¹)	Localized SAR (limbs) (Wkg ⁻¹)
Occupational exposure	Up to 1Hz	40	-	-	-
	1-4Hz	40/f	-	-	-
	4Hz-1kHz	10	-	-	-
	1-100kHz	f/100	-	-	-
	100kHz-10MHz	f/100	0.4	10	20
	10MHz-10GHz	-	0.4	10	20
General public exposure	Up to 1Hz	8	-	-	-
	1-4Hz	8/f	-	-	-
	4 Hz-1kHz	2	-	-	-
	1-100kHz	f/500	-	-	-
	100kHz-10MHz	f/500	0.08	2	4
	10MHz-10GHz	-	0.08	2	4

*Note: 1 f is the frequency in hertz.
2 average time is 6 minuets

Table 11. FCC and ICNIRP limits for Localized (Partial-body) Exposure*.

		ICNIRP (W/kg)	FCC (W/kg)
Occupational	Whole-body	0.4	0.4
	Head and trunk	10	8
General public	Whole-body	0.08	0.08
	Head and trunk	2	1.6

* averaged over 1 gram of tissue

4. Measurements

Most of the governments put certain requirements on companies who want to operate and construct base station antennas, these re-

quirements concerns the worst case estimate of the RF-EMF public exposure before the development can occur. Initially, some prediction values can be considered for the RF-EMF using some software tools, this can be achieved theoretically before the site is constructed. However, more accurate results can be obtained by measuring the radiated levels and compare it to the calculated ones. Measuring the exposure levels at a certain number of sites is necessary to verify the calculations and assess the actual exposure levels.

As this work focuses on the already constructed and operating base stations, then the radiation measurement is the practical issue to be performed. This has to be repeated occasionally and the values are to be compared with the international guidelines. Hence, sensitive equipment is required to measure the radio signals around the area of interest. A power density meter may be used to measure the electric field, magnetic field and power density in the vicinity of a mobile base station.

The device which was used here has an isotropic antenna and works in the frequency range of 0.2-3GHz. This relatively wide range covers many common radio frequencies but not only the cellular communication band and so the measured power density values are not due to the mobile base station only. A portable electric field meter (E field) with detachable isotropic probe was used to take the necessary readings. The main specifications of the measuring device are illustrated in Table 12.

Table 12. Specifications of the field measuring device.

Wide dynamic range:	0.2-600V/m. 0.01 V/m (2 V/m and 20 V/m),
Resolution (at range):	0.1 V/m (200 V/m), 1 V/m (600 V/m).
Broad frequency range:	0.2 MHz-3GHz.
Probe directivity:	Omni directional (Isotropic probe).
Ranges (V/m ,full scale):	2, 20, 200, 600.
Calibration accuracy:	+/-1.5dB (at reference levels). Typically +/-1dB.
Probe frequency rotational :	+/-1dB(2MHz-2GHz),
Probe frequency isotropicity:	-3 dB@0.2MHz:-2.5dB@3GHz.
Operating modes:	Average, Pulse AND Peak.
Reading	RMS (root mean square) in all modes:

A series of RF-EMF measurements in the form of electric field at the vicinity of several mobile telephone base stations in the city of Nablus were conducted in order to determine the exposures of the general public. The relationship between the RF power density levels specified in the safety guidelines and some typical RF power density levels actually measured around mobile phone base stations will be given.

Several typical 900 MHz sites were considered, the first one had three antennas, A, B and C, and each of them has a gain of 9 dBi and zero tilting angles with a height of the antennas as 17 m. The electric field intensity was measured at different distances from the base station. Accordingly, the magnetic field and power density were calculated and recorded as shown in Table 13. The process has been repeated for five different sites with antenna gain of 6, 9, 12, 15 and 15 dBi and with a tilting angle ranges from 0 to 4. The measured values of the electric field and the correspond-

Table 13. EMF field measurements for site-1.

Cell ID	Cell A			Cell B			Cell C		
Distance (m)	V/m	A/m	W/ m ²	V/m	A/m	W/ m ²	V/m	A/m	W/ m ²
3	1.85	0.0049	0.0091	1.74	0.0046	0.0080	2.11	0.0056	0.0118
6	2.77	0.0073	0.0203	2.75	0.0072	0.0201	2.02	0.0053	0.0108
10	3.49	0.0092	0.0323	1.43	0.0038	0.0054	2.61	0.0069	0.0181
15	2.94	0.0078	0.0229	1.45	0.0038	0.0055	1.56	0.0041	0.0064
20	0.70	0.0018	0.0013	1.74	0.0046	0.0080	2.7	0.0071	0.0193

Table 14. EMF field measurements for five sites.

Cell ID	Cell A			Cell B			Cell C		
Distance (m)	V/m	A/m	W/ m ²	V/m	A/m	W/ m ²	V/m	A/m	W/ m ²
3	1.80	0.0047	0.0086	2.25	0.0059	0.0134	3.06	0.0081	0.0248
6	2.56	0.0068	0.0173	2.52	0.0066	0.0168	2.04	0.0054	0.0110
10	3.33	0.0088	0.0294	1.02	0.0027	0.0027	2.04	0.0055	.00117
15	2.98	0.0079	0.0235	1.01	0.0026	0.0027	1.03	0.0027	0.0028
20	1.81	0.0048	0.0086	1.02	0.0027	0.0027	1.08	0.0028	0.0031

ing calculated values of the magnetic field and power density were averaged and recorded as shown in Table 14.

For a radiation source with omni direction and with no reflected signals the received signal strength decreases as the receiver moves far away from the source. In our case, the received signal depends on the reflected signal as well as the tilting angle of the antenna as shown in Fig 4. This explains the reason why the measured values are not consistence with the distance from the source. Moreover, it was clearly noticed that a reasonable amount of the received power was either removed or added to the received amount when the measurement is interrupted by a moving body like a car.

Considering a typical distance of 20 meter away from the first base station, the electric field was measured as 0.7 v/m leading to a power density of 0.0013 w/m², which is 0.000288% of the ICNIRP limit and 0.002166% of the FCC limit. On the other hand, the maximum value of the electric field density was measured at a distance of 10 meters from the base station as 3.49 v/m; this value leads to a power spectral density of 0.0323 w/m² which is 0.00718% of the ICNIRP limit and 0.00538% of the FCC limit. These results show that the measured and calculated values for the electric field, the magnetic field and the power density around the city were small compared to the international standards.

This low radiation could be due to the restrictions put on the local mobile communication operator in using a limited number of frequencies and so the same frequency must be reused again in a short distance and hence the radiated power should be kept minimum so as to prevent interference [16].

Even though the power density emitted by the base stations

is lower than the permitted levels but it is still very important to measure the power radiated by the mobile station itself, this power is believed to be more than the received one from the base station. Moreover, there are some other sources of EMF radiation in the area; this includes the local TV and FM transmitters and the WLAN. Hence, it is important to investigate the radiation from these sources.

Conclusion

Measuring the electromagnetic radiation from some cellular base stations around the city of Nablus has been performed at several sites. This is to answer the public concern wither they are safe being close to these stations and being exposed continuously to its radiation. The obtained readings were compared to some international standards and guidelines. It has been noticed that the maximum measured value was only 0.007% of the ICNIRP and 0.005% of the FCC international limits. Moreover, the measured values were not only due to the mobile base stations, but also due to all other sources of radiation in the range of 200kHz to 3GHz. The signals here may have either destructive or instructive interference at some specific point, hence it is recommended that the radiation due to the base stations should be investigated together with the other sources like local TV, FM and WLAN transmitters, this may be achieved using a suitable spectrum analyzer. Another important issue is that the radiation exposure to the mobile station itself should be measured since it may have a much larger value being very close to the users.

References

1. P. Mohana Shankar, "Introduction to Wireless Systems", Johan Wiley & Sons, INC., 2002.
2. Jon W. Mark, Weihava Zhuang, "Wireless communication and networking", Prentice Hall, 2003.
3. Theodore S. Rappaport, "Wireless Communications, Principles & practice", 2nd edition, Prentice Hall, 2002.
4. William Stallings, "Wireless communication and networks", Prentice Hall, 2002.
5. MOLISH BOOK.
6. K. Fuller, et. al., "Radio Frequency Electromagnetic Fields in the Cookridge Area of Leeds", National Radiation Protection Board, NRPB-w23, September, 2002, ISBN 0859514943.
7. International telecommunications Union, <http://www.itu.int/net/home/index.aspx>
8. <http://www.ctia.org/>
9. Physicians and Scientists for Responsible Application of science and Technology, "Mobile phones-safety Problems", September, 2004, www.psrast.org
10. G. J. Hyland, "Potential Adverse Health Impacts of Mobile Technology, Memorandum", Department of physics, University of Warwick and International Institute of Biophysics, Feb. 2000.
11. Federal Communications Commission, <http://www.fcc.gov/>
12. John Muvlder, "Cellular Phone Antennas (Base Stations) and Human Health", Medical college of Wisconsin, <http://www.mcw.edu/gcrc/cop/cell-phone-health-FAQ/toc.htm>, modified 3-April-2005.
13. World Health Organization, <http://www.who.int/en/>
14. International Commission for Non-Ionizing Radiation Protection (IC-NIRP), "Guidelines for Limiting Exposure to Time-Varying Electric, Magnetic and Electromagnetic Fields (up to 300 GHz)", Health Physics Society, Vol.74, No.4, PP.494-522, April 1998.
15. Federal Communication Commission, office of Engineering and Technology, "Questions & Answers about Biological Effects & Potential Hazards of radio frequency Electromagnetic Fields", OET56, 4th edition, August 1999.
16. Mousa A., Al Saleh R., "Problems and Suggested Solutions to Improve the Mobile Communications Network in Nablus", Information and Communication Technologies International Symposium (ICTIS05), pp. 415-420, Tetuan – Morocco, 3-6 June 2005.